

Soluna Blockout System Assembly and Installation

NORMAN[®]

WINDOW FASHIONS

1. Install the pocket in the desired location.



2. Install the side channel backs.
The side channel back should abut the pocket, flush with the end plate. Screw the backside channel directly into the window jam.




Soluna Blockout System
Assembly and Installation *(continued)*

NORMAN[®]
WINDOW FASHIONS

3. Install the shade into the pocket.



(top view)

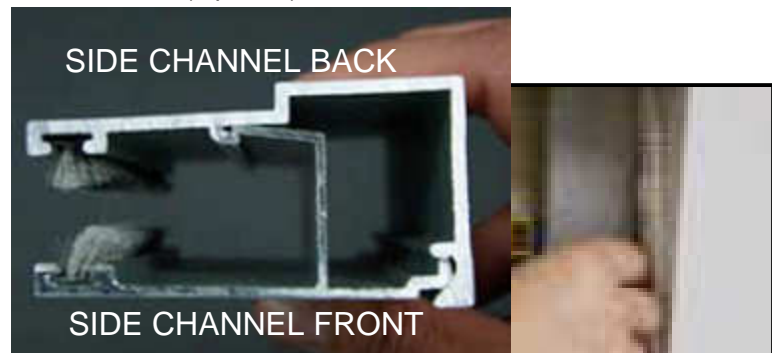

4. Install the side channel fronts.
With the shade in the up position, snap in the front of the side channel front to the side channel back.



Soluna Blockout System Assembly and Installation *(continued)*

NORMAN[®]
WINDOW FASHIONS

5. Install the bottom channel within the side channels.



6. Install the Tension Device.

Before attaching the tension device to the base, measure and mark the location in the window where the tension device will be mounted. Position the tension device on the window frame, or the wall, so that the device and chain control do not interfere with raising or lowering the shade. Make sure the chain loop is taut without over stretching. Holding the tension device upright, insert and secure the two screws. The mounting screws must be secured into a solid surface. Snap the Tension Device into the base.

